

*TMS320 DSP  
DESIGNER'S NOTEBOOK*

# ***Symmetric PWM Outputs Generation with the TMS320C14 DSP***

---

---

---

*APPLICATION REPORT: SPRA278*

*Zhenyu Yu  
Digital Signal Processing Products  
Semiconductor Group*

*Texas Instruments  
November 1997*



## **IMPORTANT NOTICE**

Texas Instruments (TI) reserves the right to make changes to its products or to discontinue any semiconductor product or service without notice, and advises its customers to obtain the latest version of relevant information to verify, before placing orders, that the information being relied on is current.

TI warrants performance of its semiconductor products and related software to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are utilized to the extent TI deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Certain application using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage ("Critical Applications").

TI SEMICONDUCTOR PRODUCTS ARE NOT DESIGNED, INTENDED, AUTHORIZED, OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS OR OTHER CRITICAL APPLICATIONS.

Inclusion of TI products in such applications is understood to be fully at the risk of the customer. Use of TI products in such applications requires the written approval of an appropriate TI officer. Questions concerning potential risk applications should be directed to TI through a local SC sales office.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards should be provided by the customer to minimize inherent or procedural hazards.

TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does TI warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of TI covering or relating to any combination, machine, or process in which such semiconductor products or services might be or are used.

## **TRADEMARKS**

TI is a trademark of Texas Instruments Incorporated.

Other brands and names are the property of their respective owners.

## **CONTACT INFORMATION**

US TMS320 HOTLINE	(281) 274-2320
US TMS320 FAX	(281) 274-2324
US TMS320 BBS	(281) 274-2323
US TMS320 email	dsph@ti.com

## Contents

<b>Abstract .....</b>	<b>7</b>
<b>Product Support.....</b>	<b>8</b>
World Wide Web .....	8
Email.....	8
<b>Design Problem.....</b>	<b>9</b>
<b>Solution.....</b>	<b>9</b>
Example .....	11

## Figures

<b>Figure 1. Symmetric and Asymmetric PWM Signals.....</b>	<b>9</b>
<b>Figure 2. Symmetric PWM Output Generation with the TMS320C14 .....</b>	<b>10</b>

# Symmetric PWM Outputs Generation with the TMS320C14 DSP

---

---

---

## Abstract

Pulse Width Modulated (PWM) signal generation is crucial to many motor and motion control applications. PWM signals are pulse trains with fixed frequency and magnitude and variable pulse width. There is one pulse of fixed magnitude in every PWM period. However, the width of the pulses changes from period to period according to a modulating signal. This document discusses how to generate symmetric PWM outputs with the TMS320C14.



## **Product Support**

### **World Wide Web**

Our World Wide Web site at [www.ti.com](http://www.ti.com) contains the most up to date product information, revisions, and additions. Users registering with TI&ME can build custom information pages and receive new product updates automatically via email.

### **Email**

For technical issues or clarification on switching products, please send a detailed email to [dsph@ti.com](mailto:dsph@ti.com). Questions receive prompt attention and are usually answered within one business day.

## Design Problem

How do I generate symmetric PWM outputs with the TMS320C14?


## Solution

Pulse Width Modulated (PWM) signal generation is crucial to many motor and motion control applications. PWM signals are pulse trains with fixed frequency and magnitude and variable pulse width. There is one pulse of fixed magnitude in every PWM period. However, the width of the pulses changes from period to period according to a modulating signal.

When a PWM signal is applied to the gate of a power transistor, it causes the turn on and turn off intervals of the transistor to change from one PWM period to another PWM period, according to the same modulating signal. The frequency of a PWM signal is usually much higher than that of the modulating signal, or the fundamental frequency, such that the energy delivered to the motor and its load depends mainly on the modulating signal.

Figure 1 shows two types of PWM signals: symmetric and asymmetric. The pulses of a symmetric PWM signal are always symmetric with respect to the center of each PWM period. The pulses of an asymmetric PWM signal always have the same side aligned with one end of each PWM period.

*Figure 1. Symmetric and Asymmetric PWM Signals*

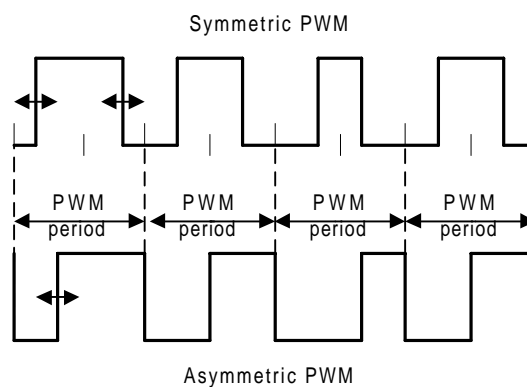



It has been shown that symmetric PWM signals generate fewer harmonics in the output currents and voltages.

The TMS320C14 can generate 6 high-resolution asymmetric PWM outputs as represented by CMP0 and CMP1 in Figure 2. A small amount of off-chip logic and code lines can be used to easily generate 3 symmetric PWM outputs from the 6 asymmetric PWM outputs. Figure 2 shows how to generate one symmetric PWM output.

Figure 2. Symmetric PWM Output Generation with the TMS320C14

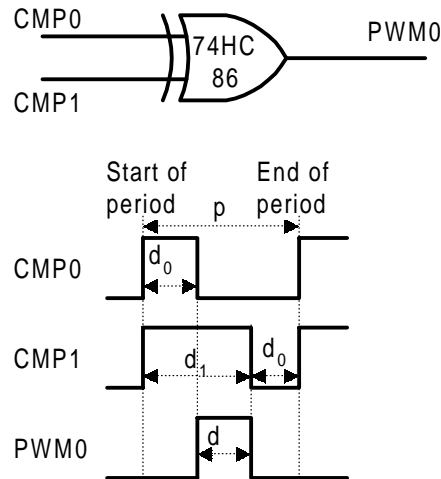


Figure 2 also shows the waveforms for PWM0 with compare/PWM outputs CMP0 and CMP1 of the 'C14, where:

- p is the period value for the selected timer and determines the PWM carrier period,
  - d is the desired pulse width for the symmetric PWM output for this PWM period,
  - d0 is the derived compare value for Compare Unit 0, and
  - d1 is the derived compare value for Compare Unit 1,
- all in terms of CPU clock periods.

The actual PWM carrier period is given by:  $p \cdot (\text{CPU clock period})$ . The smallest CPU clock period for the TMS320C14 is 160nS. The desired pulse width d in terms of CPU clock period is obtained by:  $d = (\text{desired pulse width}) / (\text{CPU clock period})$ . Given the desired pulse width d in terms of CPU clock period, the compare values for Compare Units 0 and 1 are determined by:  $d0 = 0.5(p - d)$ ,  $d1 = d0 + d$ .



## Example

Using the scheme in Figure 2, one can evaluate the variables needed to generate a pulse width of  $16\mu\text{S}$  assuming a PWM carrier period of  $49.92\mu\text{S}$  (that is, a PWM frequency of 20.032KHz) and a CPU clock period of 160nS. The calculations are as follows:

$$\begin{aligned} p &= 49.92 \mu\text{S} / 160 \text{ nS} = 312; \\ d &= 16 \mu\text{S} / 160 \text{ nS} = 100; \\ d0 &= 0.5 * (312 - 100) = 106; \\ d1 &= d0 + d = 106 + 100 = 206. \end{aligned}$$

Code lines to do the above are as follows:

```
;
; Other code lines to determine d
;
; Calculate d0 and d1 from d based on d0=0.5*(p-d),
;   d1=d0+d
lac      p          ; load period
sub      d          ; calculate p-d
sac1     temp       ; save p-d
lac      temp,15     ; load p-d, left shift 15 bits
sach     temp0       ; save d0=0.5*(p-d)
addh     d           ; calculate d1=d0+d
sach     temp1       ; save d1
;
; Load compare (shadow) registers
lack     #BANK4      ;
sac1     temp        ;
out      temp,BSR     ; select shadow reg bank
out      temp0,ACT0   ; load shadow register 0
out      temp1,ACT1   ; load shadow register 1
;
; Continue
```

The logic in Figure 2 can be repeated for CMP2 and CMP3, and for CMP4 and CMP5. This way, up to 3 symmetric PWM outputs can be generated with the 6 asymmetric PWM outputs of a 'C14 and one 74HC86. The calculation needed to determine the pulse width,  $d$ , for each symmetric PWM output is performed just like in any normal motor and motion control application. The only software overhead is the subtraction, left shift and addition needed to determine  $d0$  and  $d1$ .